

3-2-5. BACKUP

You can backup the recorded files on CD,DVD,USB and playback from those directly.

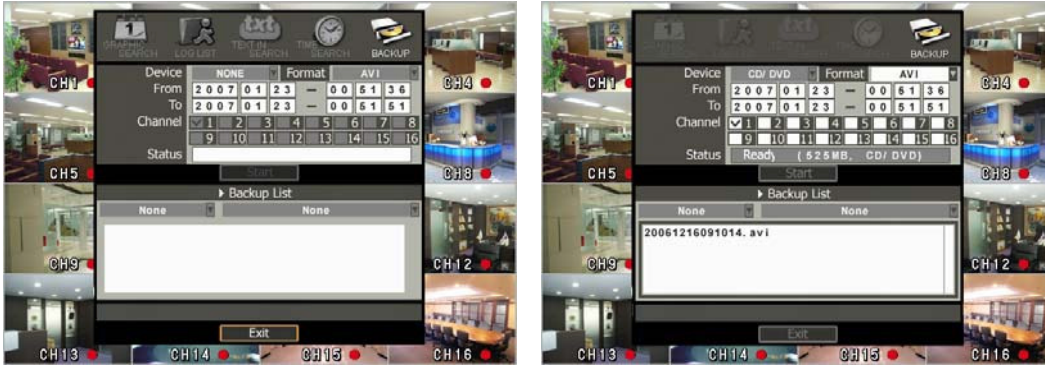


figure1

figure2

1) How to backup

There are two ways to backup. You can go to the backup menu in search. After inserting the empty media on the drive or USB, go to 'Backup'. Press the 'Enter' button then you can see the backup screen.(figure1) Input the desired time and channel to backup using the number keys on the front. After confirming, it starts. If chosen time is bigger than the media, time will be adjust automatically.

Or you can push the 'Backup' button upon playing. Next procedure is the same and the time sets for 10 minutes automatically.

There are two format on backup file, AVI and DB. The AVI format is adapted 1ch backup. You can play with Windows Media Player if you backup with AVI format. If you want multiple channel backup, choose the DB format. You can play with our client software with this format.

2) How to play

Insert the recorded media to the drive and execute 'Backup'. You can see the screen like figure2. Choose the date by the arrow key and press the 'Enter'. Sometimes FF or FB have some difficulties for the reason that CD, DVD is not enough to fast.